 
 




*Williams Encore
User's Manual*

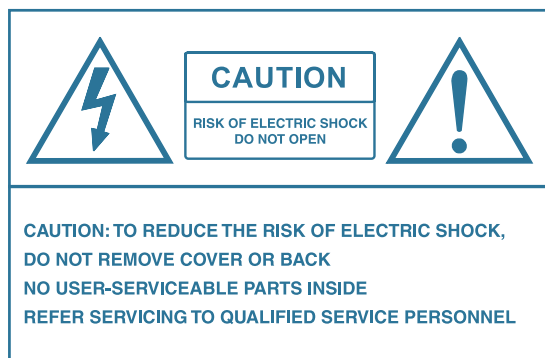

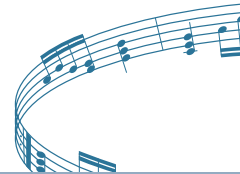

Important Safety Instructions

- 1) Do not use near water.
- 2) Clean only with dry cloth.
- 3) Do not block any ventilation openings.
- 4) Do not place near any heat sources such as radiators, heat registers, stoves, or any other apparatus (including amplifiers) that produce heat.
- 5) Do not remove the polarized or grounding-type plug.
- 6) Protect the power cord from being walked on or pinched.
- 7) Only use the included attachments/accessories.
- 8) Unplug this apparatus during lightning storms or when unused for a long periods of time.
- 9) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Statements

FCC Statements

1. Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.



We would like to express our appreciation and congratulate you for purchasing the Williams Encore digital piano. With proper care it will provide you with years of musical enjoyment. Williams' advanced state of the art electronics are combined with an elegant cabinet that adds beauty and sophistication to any home or studio environment.

Some features include:

- Authentic acoustic piano feel
- Williams' acclaimed stereo imaging
- Acoustic instrument voices offering unmatched realism
- Metronome feature with variable tempo to facilitate practice
- Compact and dynamic sound delivery system
- Three track recorder that allows you to record and playback your performances
- Digital effects to further enhance the instrument voices
- Over 50 pre-recorded play-along songs with separate left hand/right hand
- MIDI controls and compatibility
- Stereo line output and two headphone outputs
- Sustain, soft, and volume pedal jacks

You will find many more features and functions listed within this owner's manual. In order to make the most of your piano, we suggest that you take a few minutes to read this owner's manual, then save it for later reference.



Contents

Taking Care of your Digital Piano	4
Connector Panel	5
Pedals	5
Playing the Piano	6
Adapter	6
Turning on the Power	6
Setting the Volume	6
Panel Controls	7
Control Wheels	11
Keyboard Voices	12
Instrument Voices	12
Layer Voice (dual)	13
Lower Voice (split)	14
Functions	15
Function Mode	15
Touch Mode	16
Metronome Volume	17
Split Point	17
Reverb Level	18
Chorus Level	18
Song Volume	19
Octave	19
Pedal Assign	20
Master Tune	20
Grade	21
Registration	22
Save Registration	22
Recall Registration	22
Recorder	23
Recording	23
Playback	24
Erasing Tracks	25
Play Along Songs	26
Grading	27
MIDI	28
MIDI Implementation Chart	29
Voice List	30
Specifications	31
Warranty	32



Taking Care of Your Digital Piano

This Williams Encore digital piano will supply you with years of musical enjoyment if you follow the suggestions listed below.

Service and Modification

This product should be serviced by qualified service personnel when:

- The power supply cord or the plug has been damaged.
- Liquid has been splattered into the unit or it has been exposed to rain.
- The instrument does not appear to operate normally or exhibits a marked change in performance.
- The instrument has been dropped or the cabinet has been damaged.

Handling and Transport

- Never apply excessive force to the controls, connectors or other parts of the instrument.
- Always unplug cables by gripping the plug firmly, not by pulling on the cable.
- Disconnect all cables before moving the instrument.
- Physical shocks caused by dropping, bumping, or placing heavy objects on the instrument can result in scratches and/or more serious damage.
- Carefully check the amplifier volume control before playing. Excessive volume can cause permanent hearing loss.

Cleaning

- Clean the cabinet and panel with a soft, dry cloth. A wax based polish may be used on the cabinet, although rubbing with a soft cloth will usually suffice. Do not use paint thinner or petrochemical based polishes.
- To maintain the luster of the keys and buttons, wipe with a clean, lightly dampened cloth, and then polish with a soft, dry cloth.

Location

- To avoid deformation, discoloration, or more serious damage, do not expose the instrument to the following conditions: Direct sunlight, high temperatures, excessive humidity, excessive dust, strong vibration.
- Leave enough space around the piano for proper ventilation.
- This instrument contains digital circuitry and may cause interference if placed too close to radio or television receivers. If interference occurs, move the instrument further away from the affected equipment.
- Avoid placing vinyl objects on top of the instrument, vinyl can stick to and discolor the surface.

 
Power

- Turn the power switch off when the instrument is not in use.
- To avoid damage to the instrument and other devices to which it is connected, turn the power switches of all related devices off prior to connection or disconnection of MIDI cables.
- Turn the power off if the main cable is damaged, or the instrument is splattered with liquid.
- Do not switch the unit on and off in quick succession, as this places an undue load on the electronic components.
- Unplug the AC power cord during an electrical storm.
- Avoid plugging the AC adaptor into the same AC outlet as appliances with high power consumption, such as electric heaters or ovens.



Connector Panel


These connector jacks are located on the left side of the piano.

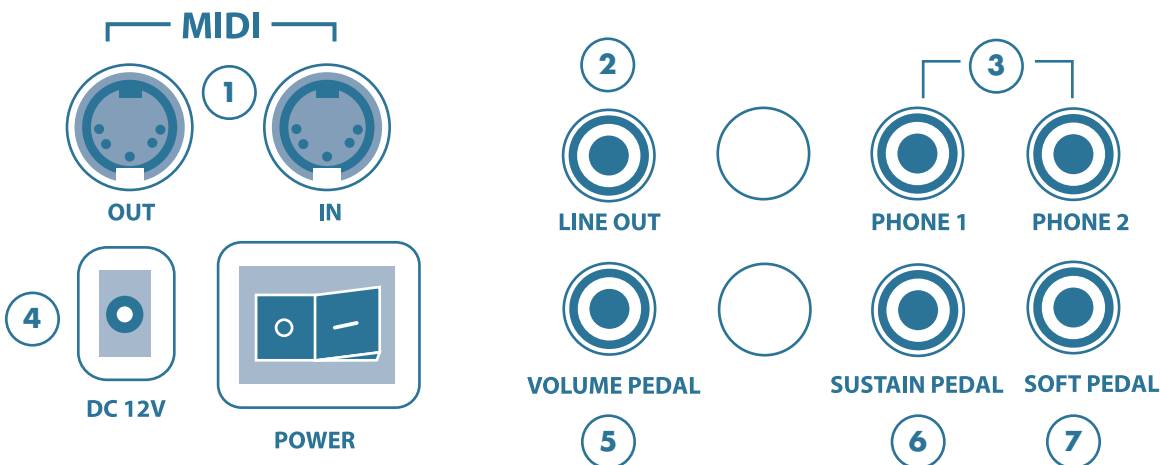

1. **MIDI OUT / MIDI IN:** The Encore provides **MIDI IN** and **MIDI OUT** ports. MIDI jacks allow communication with other products equipped with MIDI interfaces. Please see the MIDI section of this manual for further details.
2. **STEREO LINE OUT:** This stereo audio output jack supplies an output signal to external amplification.
3. **PHONE 1 / PHONE 2:** You can play in total silence without disturbing others in the room by plugging a set of headphones into one of the appropriate jacks located on the left side of the keyboard. When headphones are plugged into Phone 1, the speaker sound delivery system is still heard. When headphones are plugged into Phone 2, the speaker sound delivery system is turned off.
4. **DC 12V INPUT:** Connection for the included power adapter. Please use only the provided adapter.

Pedals

 
5. **VOLUME PEDAL:** If desired, plug a volume control pedal into this connector. The volume pedal acts as the master volume control on the control panel. When the volume pedal heel is down (tip up) the volume is at minimum. When the volume pedal heel is up (tip down) the overall volume of the piano is maximum.
6. **SUSTAIN PEDAL:** Plug the included sustain pedal into this connector. You can also use an optional piano-style sustain pedal. When the sustain pedal is engaged, all piano keys played will decay gradually as if you were holding them down.
7. **SOFT PEDAL:** If desired, plug a momentary footswitch pedal into this connector. The function of this connector can be selected either as soft pedal (default) or start/stop. Please see the pedal assign function section of this manual for further details. When the Soft pedal is engaged the keyboard volume of all piano keys played is reduced and thereby the timbre is slightly altered.

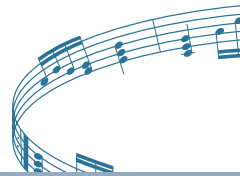

Playing the Piano

Adapter

 
Plug the AC power adapter into the “DC 12V” jack, located on the left side of the keyboard.

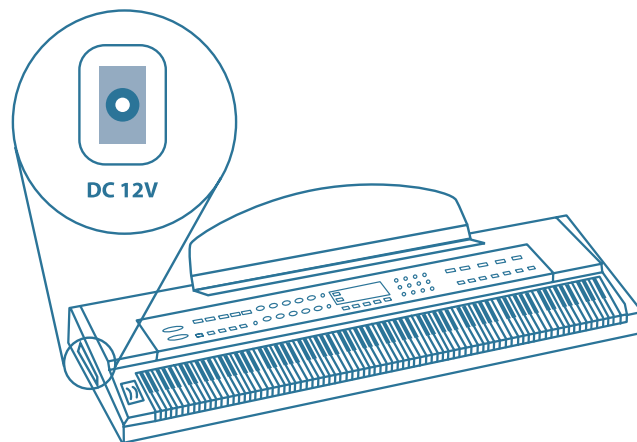

Turning on the Power

Turn on the power switch located on the left side of the keyboard (O is off, and – is on). The display will welcome you, then show “01: Grand Piano”.

 NOTE: when you turn the power off, do not turn the power back on immediately. Wait at least five seconds to turn the power back on so that the circuit can properly reset.

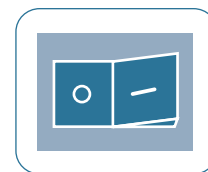


POWER



Setting the Volume

Adjust the volume control to a comfortable level by sliding the Master Volume control left for softer sound or right for louder sound.

 
Begin to play!

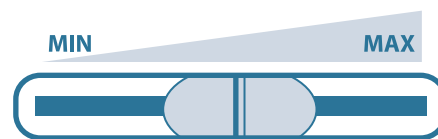

MASTER VOLUME




 
Panel Controls

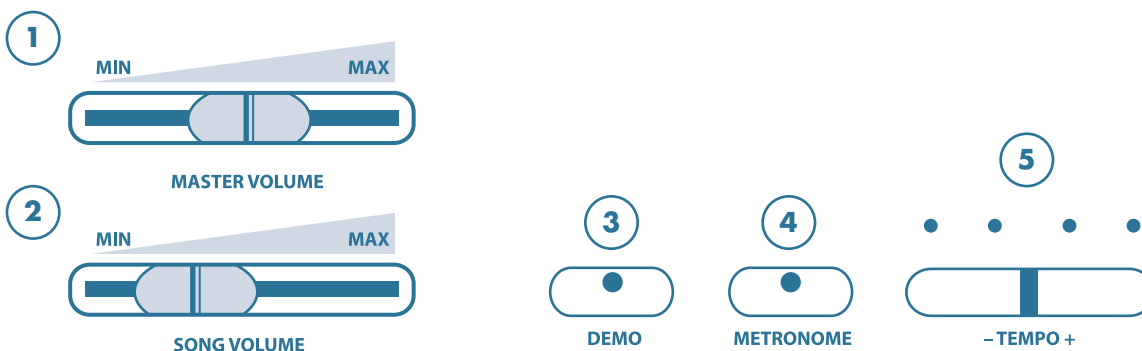


The control panel is divided into several distinct sections. The following is a brief description of all the features located on the control panel.

- 1. MASTER VOLUME:** Use this sliding control button to adjust the overall volume of the keyboard.
- 2. SONG VOLUME:** Slide this controller to adjust the volume of the built-in play-along songs; the keyboard instrument voice will not be affected.
- 3. DEMO:** Press the **DEMO** button. The first demo song will play back instantly. The Encore has ten different demonstration songs. To access an individual demo song, press the **+ / YES** or **- / NO** buttons when the demo feature is engaged. The demo songs will continue to play consecutively until the **DEMO** button or the **PLAY/STOP** button is pressed.
- 4. METRONOME:** Press the **METRONOME** button to engage the built-in metronome. Use the **+ / YES** and **- / NO** buttons within three seconds after the metronome has been engaged to choose the beat of your choice: 1/4, 2/4, 3/4, 4/4, 5/4, 6/4, 6/8 or 12/8. After three seconds, the display will revert to the selected voice.
- 5. TEMPO:** Press one of the **TEMPO** buttons, the current tempo value will appear on the display. You can use the **TEMPO +**, **TEMPO -** buttons to change the tempo value range from 40 to 240 bpm (beats per minute). Press the **TEMPO +** or **TEMPO -** buttons simultaneously to recall the default tempo setting. After three seconds the display will revert to the selected voice.

  
There is a four-dot beat indicator above the tempo buttons. It indicates the tempo and beat for the metronome or song that is playing.

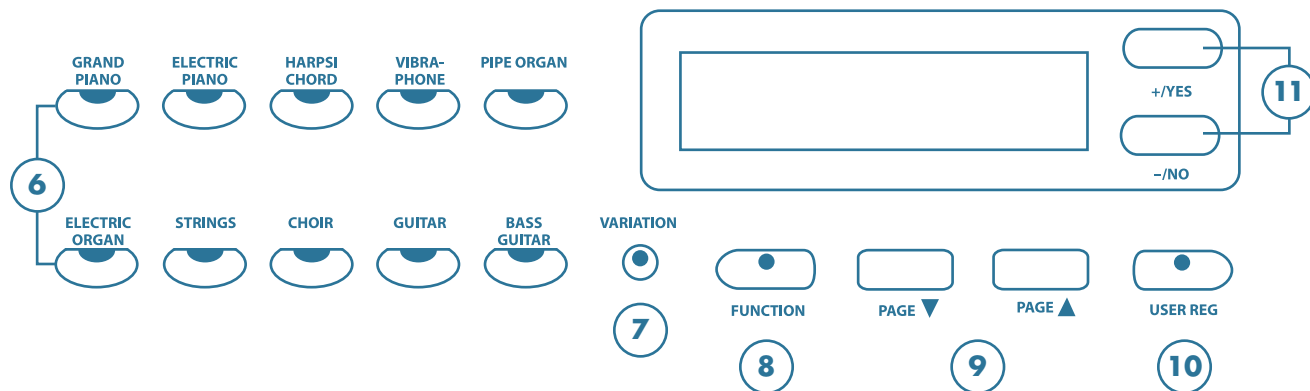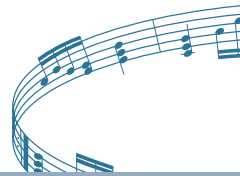

- 6. INSTRUMENT VOICE SELECT BUTTONS:** There are 10 instrument voices buttons and 30 instrument voices. You can instantly select an instrument voice by pressing one of the instrument voice select buttons. You can select the variation of the engaged voice by pressing the variation button. There are a total of 3 instrument voices per instrument voice button. There is a complete list of all 30 voices listed in the back of the manual. Please see the Voice section of this manual for more information.
- 7. VARIATION:** This button selects the variations of the initial instrument voice button sound.
- 8. FUNCTION:** The **FUNCTION** button is used to access the function menu. The function menu can be used to adjust or change the parameters of a number of settings. The reverb level, chorus level, touch, split point, tuning etc. are all set from the function menu. Please see the Function section of this manual for more information.
- 9. PAGE:** The **PAGE** buttons (up and down) are used to access the different menus in the Function feature. When the **FUNCTION** button has been pressed, use the **PAGE DOWN** or **PAGE UP** buttons to access the Function menu selections.
- 10. USER REG:** Registration is used to store keyboard settings. Press the **USER REG** button to engage the registration memory mode. There are two keyboard memory settings. See the Registration section of this manual for more information.
- 11. ENTRY KEYS:** Use the **+/YES**, **-/NO** buttons directly while using the voice or function settings. These buttons are also used to access or alter many of the function features or when input is necessary.

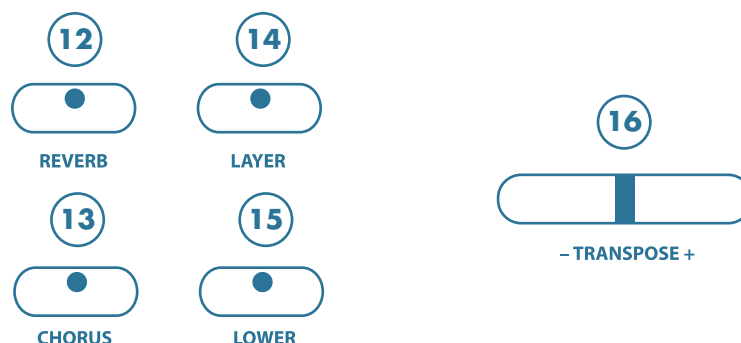 

- 12. REVERB:** The reverb effect is engaged automatically when the power is turned on. Reverb simulates the effect of playing in a big room or hall where the sound reverberates off the walls and ceiling. Press the **REVERB** button to turn off the reverb effect. Reverb depth can be changed in the function menu. Please see the Function section for more information.
- 13. CHORUS:** The Chorus effect adds depth and spaciousness to the selected keyboard voice. Press the **CHORUS** button to engage the chorus effect and the indicator will light up. Press the button again to turn off the chorus effect. Chorus depth can be changed in the function menu. Please see the Function section for more information.
- 14. LAYER:** Engaging the **LAYER** button will put the keyboard in “dual” mode. Layer refers to an additional voice that is “tone mixed” with the selected keyboard voice. The assigned layer voice will be heard together with the original voice. To select a new layered instrument voice, use the **+ / YES** or **- / NO** buttons within 3 seconds after the **LAYER** button has been engaged.
- 15. LOWER:** With the Lower feature engaged, the keyboard operates in the “split” mode. In the Lower mode the keyboard is divided into two sections. In the right-hand section the original and/or layered voice will sound, and in the left-hand section a different voice can be assigned to sound when the keys are played. To select a new Lower instrument voice use the **+ / YES** or **- / NO** buttons within three seconds after the **LOWER** button has been engaged.
- 16. TRANSPOSE:** The transpose feature can shift the pitch of the keyboard up or down in semitone intervals up to a maximum of 24 semitones. Press one of the **TRANSPOSE** buttons, the current transpose value will appear on the display. Use the **TRANSPOSE +** or **TRANSPOSE -** buttons to set the transpose value range from -12, one octave lower, to 12, one octave higher. Press the **+** and **- TRANSPOSE** value buttons simultaneously to recall the default value of 0. After three seconds the display will return to the currently selected instrument voice.

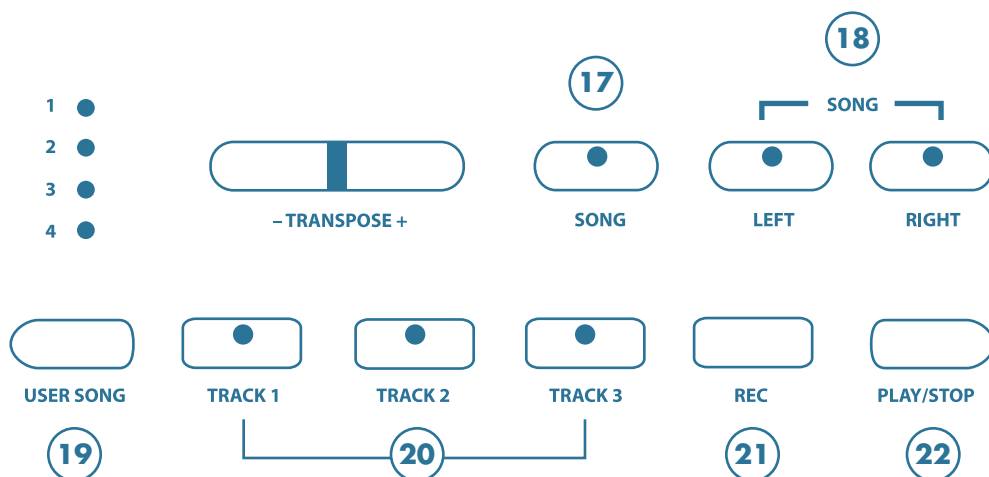 

17. SONG: The “Play Along Songs” or “Music Teacher” feature can be used as an aid to learn the 58 practice songs built into the Encore. The **SONG** button turns the “music teacher” function on and off. Please see the Play Along Song section of this manual for more information.

18. LEFT, RIGHT: These buttons are used in conjunction with the **SONG** button. It allows the player to play along with the prerecorded traditional songs contained within this piano. The **LEFT** button will play the right hand of the selected song, so that the user can practice the left hand portion of the song. The **RIGHT** button will play the left hand of the selected song, so that the user can practice the right hand portion of the song. When engaging the **LEFT** and **RIGHT** buttons simultaneously, only the metronome count will sound and the user should play both the left and right portions of the selected song. Please see the Play Along Song section of this manual for more information.

19. USER SONG: This unit is able to record four songs, each with 3-tracks. It will record all note events as they are performed. This recorded information is nonvolatile and therefore will not be lost when the power is turned off. The **USER SONG** button accesses one of the four available song settings for recording or playback. Please see the Recorder section of this manual for more information.

 
20. TRACK 1, TRACK 2 and TRACK 3: There are three tracks for recording your performance for each song composition. These tracks are assigned by the **TRACK 1/2/3** buttons. Please see the Recorder section of this manual for more information.

21. REC: To record, press and hold down the **REC** button then press the **TRACK** button you want to record in. Recording begins as soon as you start to play on any section of the keyboard. Press the **REC** or **PLAY/STOP** button again to stop recording. Please see the Record section of the manual for more information.

22. PLAY/STOP: Press the **PLAY/STOP** button to hear selected tracks that you have recorded. Press the **PLAY/STOP** button again to stop the playback. Please see the Recorder section of this manual for more information.



Control Wheels

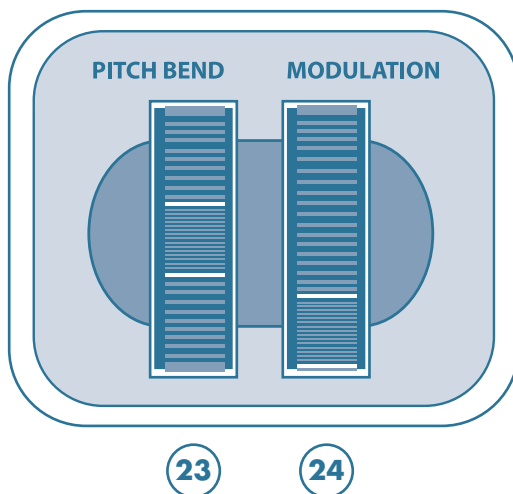


The control wheels are located on the left side of the keyboard.

23. PITCH BEND WHEEL: The **PITCH BEND** wheel allows you to smoothly raise or lower the pitch.


While a note or notes are being played on the keyboard, roll the **PITCH BEND** wheel up away from you to raise the pitch, or down towards you to lower the pitch of the note(s) played.

 24. MODULATION WHEEL: The **MODULATION** wheel adds a vibrato effect to notes played. Roll the **MODULATION** wheel up, away from you, to raise the amplitude of the vibrato or down, toward you, to lower the amplitude. If you don't want any vibrato, rotate the wheel to the lowest position.

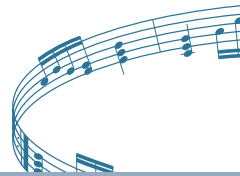

Keyboard Voices

 Instrument Voices

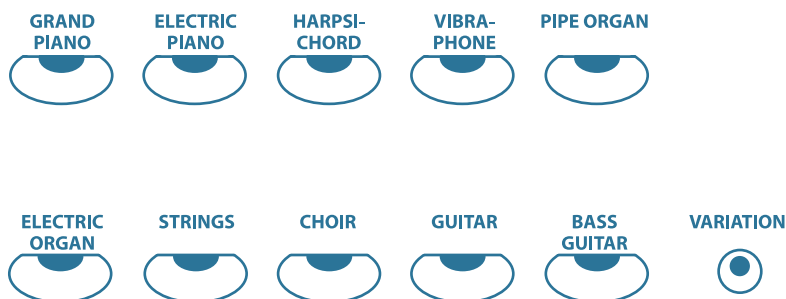

VOICE SELECTION: There are 30 instrument voices and 10 sound button groups. A complete list of all 30 voices is in the back of this manual.

QUICK SELECT INSTRUMENT VOICES: There are ten voices that can be selected quickly by pressing one of the ten voice-select buttons. Each one of these instrument voice buttons has three instruments related to that sound group. You can access the other instrument voices by using the **VARIATION** button or by pressing the **+ / YES** or the **- / NO** buttons.

SELECTING ONE OF THE 30 INSTRUMENT VOICES

1. Press the **VOICE** select button that correspond to the group of instrument voices that you would like to play.
2. Press the **VARIATION** Button to access the other two instrument voices that are available in the voice select button that you have engaged.

 
*NOTE: When pressing the **VARIATION** button, the variation button LED will be **GREEN** indicating the first variation of the original instrument voice. When pressing the button a second time, the variation button LED will be **RED** indicating the second variation of the original instrument voice. When the variation button LED is **OFF** the original voice will be heard.*

USING + / YES OR - / NO TO SELECT INSTRUMENT VOICES

Press the **+ / YES** or **- / NO** buttons to cycle through all 30 instrument voices. Holding either button down will auto repeat the cycle through all 30 voices.



VARIATION

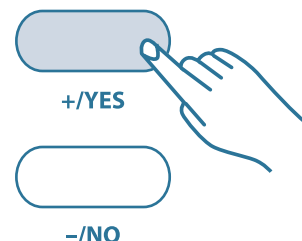



Layer Voice (Dual)

Layer, or dual, refers to an additional voice that is “tone mixed” with the originally selected keyboard voice. The assigned layer voice will be heard with the original voice when the layer feature is engaged.

TO USE THE LAYER FUNCTION

1. Press the **LAYER** button, the currently assigned layer voice will be shown on the display, and the LED indicator will turn on.

 
 
2. Use the **+ / YES**, **- / NO** buttons or the quick select voice buttons to select the desired Layer voice.

*NOTE: The LCD display will show the layer voice number and name, and after three seconds the display will revert to the originally selected main voice. You must select the **+ / YES**, **- / NO** buttons or the Quick Select Voice Buttons within the three second period that the layer voice is displayed*

3. Press the **LAYER** button a second time and the current layer volume level will show on the display LCD. While the layer volume screen is displayed, use the **+ / YES** or the **- / NO** buttons to raise or lower the volume of the selected layer instrument voice. The LCD display screen will show volume setting.


NOTE: This layer volume setting will be displayed on the LCD screen for three seconds. The LCD display will revert to the originally selected main instrument voice after three seconds.

4. Press the **LAYER** button again to turn the **LAYER** function off.

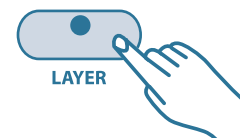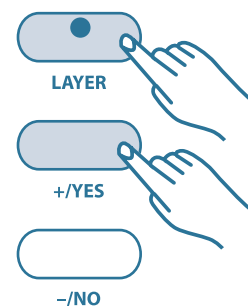

TO ADD REVERB AND/OR CHORUS EFFECTS TO THE LAYER VOICE

 When the reverb and/or chorus effects are added to the master voice, they will be added to the layer voice automatically. The amount of reverb and chorus level applied to a layer voice can be adjusted separately. Please see the Function section in the manual for detailed information.

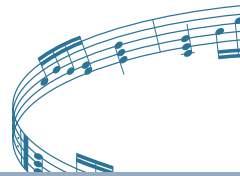

Lower Voice (Split)

In the lower, or split, mode the keyboard is divided into two separate sections. To the right of the split point, the currently selected main voice, or the layered and main voice will sound. The keys to the left of the split point can play a different instrument voice.

TO USE THE LOWER FUNCTION

1. Press the **LOWER** button, the currently assigned lower voice will be shown on the display, and the LED indicator will turn on.

 
 
2. Use the **+ / YES**, **- / NO** buttons or the quick select voice buttons to select the desired lower voice.

*NOTE: The LCD display will show the lower voice number and name, and after three seconds the display will revert to the originally selected main voice. You must select the **+ / YES**, **- / NO** buttons or the quick select voice buttons within the three second period that the lower voice is displayed.*

3. Press the **LOWER** button a second time and the current lower volume level will show on the display LCD. While the lower volume is displayed, use the **+ / YES** or the **- / NO** buttons to raise or lower the volume of the selected lower instrument voice. The LCD display screen will show the volume setting.

NOTE: This lower volume setting will be displayed on the LCD screen for three seconds. The LCD display will revert to the originally selected main instrument voice after three seconds.

4. Press the **LOWER** button again to turn the lower function off.

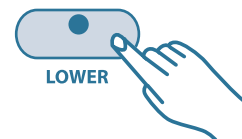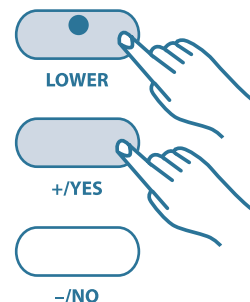

TO ADD REVERB AND/OR CHORUS EFFECT TO THE LOWER VOICE

 
When the reverb and/or chorus effects are added to the main voice, they will be added to the lower voice automatically. The amount of reverb and chorus level applied to the lower voice can be adjusted separately. Please see the Function section in the manual for detailed information.

ASSIGNING THE SPLIT POINT FOR THE KEYBOARD

The keyboard is split into two sections at the split point. The default split point is the G2 key. A different split point can be assigned in the function menu “Split Point.” Please see the function section of this manual for more information.



Functions

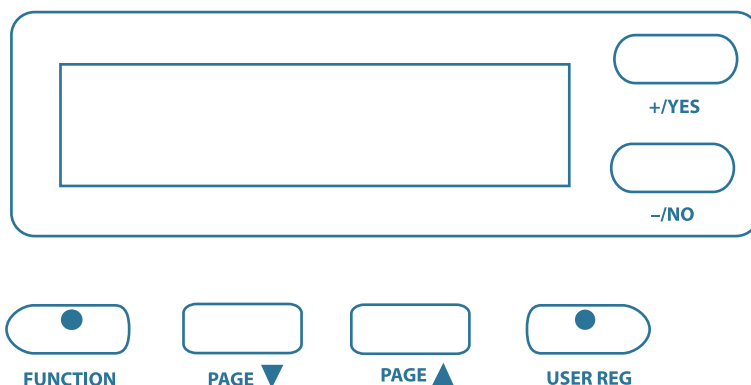



The Function mode is used to set up or to adjust various parameters related to the operation of this keyboard. With the **FUNCTION** button engaged, you may access the menu for the Touch, Metronome Volume, Split Point, Reverb Level, Layer Reverb Level, Lower Reverb Level, Chorus Level, Layer Chorus Level, Lower Chorus Level, Song Volume, Octave, Layer Octave, Lower Octave, Pedal Assign, Master Tune and Grade selections. In the pages that follow, each of these controls will be explained.

Function Mode

USING THE FUNCTION PARAMETER MENU

  1. Press the **FUNCTION** button. The first menu item that can be manipulated will appear on the display and the Function LED indicator will turn on.
2. Press the **PAGE UP** or the **PAGE DOWN** buttons until the menu you wish to access appears on the LCD display screen.
3. Press the **+/YES** button to show the current parameter for your selected function.
4. Press the **+/YES** or the **-/NO** buttons to adjust the parameter.
*NOTE: Pressing the **+/YES** and the **-/NO** buttons simultaneously will recall the default setting.*
5. To exit this mode press the **FUNCTION** button. Its indicator LED will turn off.

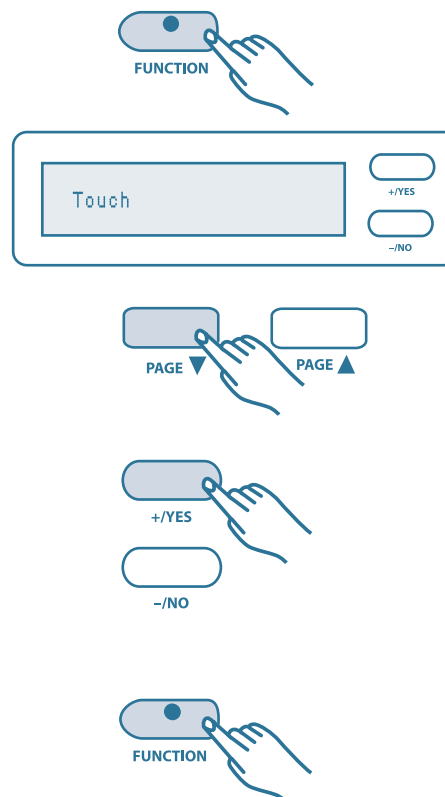

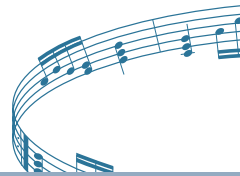

Touch Mode

The Encore offers four types of keyboard touch sensitivity settings: Soft, Normal, Hard and Fixed. These are also known as velocity sensitivity settings and can help you to adjust the keyboard to your playing style. The Normal setting is selected automatically when the piano is turned on.

Soft is the most sensitive keyboard response which permits maximum sound levels with a light touch.

 
Normal is an intermediate response suitable for most styles of music, and is the default setting.

Hard is a less sensitive keyboard response which requires a heavier touch to obtain maximum sound levels.

Fixed does not offer any touch sensitivity. Each key plays at full volume no matter how hard the piano key is hit. It is commonly used on Harpsichord and Organ voices.

USING THE TOUCH SENSITIVITY PARAMETER

1. Press the **FUNCTION** button. The Function LED indicator will turn on. The first menu item which appears on the LCD display is Touch.
2. Press the **+ / YES** button to show the Touch Sensitivity setting that is currently selected.
3. Press the **+ / YES** or the **- / NO** buttons to change the Touch Sensitivity setting.
4. Play the Keyboard to confirm that your currently selected Touch setting is correct for your performance.
5. To Exit the Function mode, press the **FUNCTION** button. The Function LED indicator will turn off.

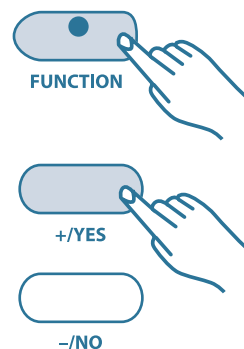




Metronome Volume

The metronome volume control function has a range from 00 - 24.

The metronome is engaged and its beat is selected by pressing the **METRONOME** control panel button.

USING THE METRO VOLUME PARAMETER

 1. Press the **FUNCTION** button. The function LED indicator will turn on.
2. Press the **PAGE DOWN** button to show the Metro Volume on the LCD screen.
3. Press the **+ / YES** to display the current Metro Volume setting.
4. Press the **+ / YES** or the **- / NO** buttons to change the Metro Volume setting.
5. To exit the function mode, press the **FUNCTION** button. The function LED indicator will turn off.


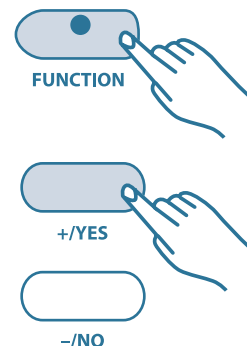



Split Point

When the lower mode is engaged, the keyboard is divided into two parts at the split point. In the right hand section, the original (and Layer voice - if engaged) will sound. In the left-hand section, a new instrument voice can be assigned. The split point location for the keyboard can be changed. Its range is from G1 - C7.

CHANGING THE SPLIT POINT SETTING

   1. Press the **FUNCTION** button. The function LED indicator will turn on.
2. Press the **PAGE DOWN** button twice to show the Split Point on the LCD screen.
3. Press the **+ / YES** to display the current Split Point setting.
4. Press the **+ / YES** or the **- / NO** buttons to change the Split Point setting.
5. To exit the function mode, press the **FUNCTION** button. The function LED indicator will turn off.

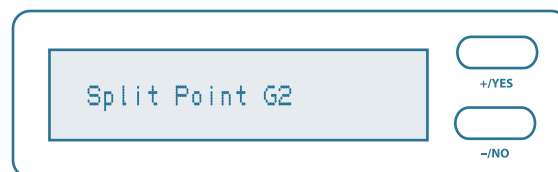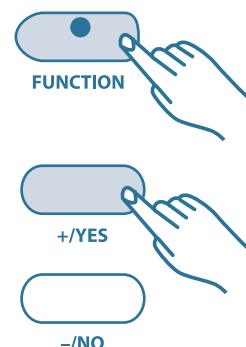


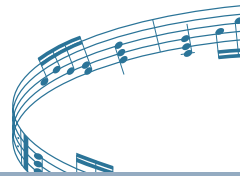


Reverb Level

Reverb simulates the effect of playing in a big room or hall where the sound reverberates off the walls and ceiling. The reverb effect is engaged automatically when the power is turned on. You can switch the reverb feature on and off by pressing the **REVERB** button. Select the level of reverb from the function menu. Its range is from 1-16.

USING THE REVERB LEVEL PARAMETER

  1. Press the **FUNCTION** button. The function LED indicator will turn on.
2. Press the **PAGE DOWN** button three times to show Reverb Level on the LCD screen.
3. Press the **+ / YES** to display the current Reverb Level setting.
4. Press the **+ / YES** or the **- / NO** buttons to change the Reverb Level.
5. Press the **PAGE DOWN** button to show the Layer Reverb Level setting and adjust it following steps 3 and 4.
6. Press the **PAGE DOWN** button again to show the Lower Reverb Level setting and adjust it following steps 3 and 4.
7. To exit the function mode, press the **FUNCTION** button. The function LED indicator will turn off.

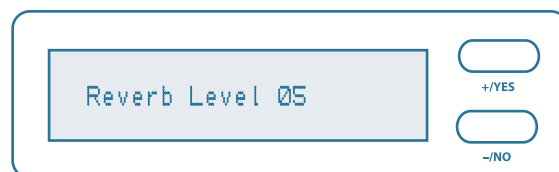
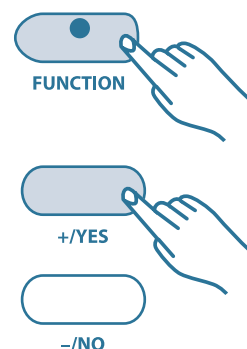


Chorus Level

The chorus effect enriches your selected instrument voice by adding depth and texture. Press the **CHORUS** button to engage the chorus effect. Adjust the level of chorus in the function menu. Its range is from 1-16.

USING THE CHORUS LEVEL PARAMETER

  1. Press the **FUNCTION** button. The function LED indicator will turn on.
2. Press the **PAGE DOWN** button six times to show Chorus Level on the LCD screen.
3. Press the **+ / YES** to display the current Chorus Level setting.
4. Press the **+ / YES** or the **- / NO** buttons to change the Chorus Level setting.
5. Press the **PAGE DOWN** button to show the Layer Chorus Level setting and adjust it following steps 3 and 4.
6. Press the **PAGE DOWN** button again to show the Lower Chorus Level setting and adjust it following steps 3 and 4.
7. To exit the function mode, press the **FUNCTION** button. The function LED indicator will turn off.

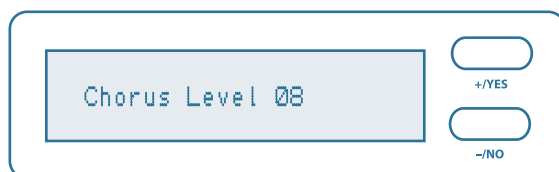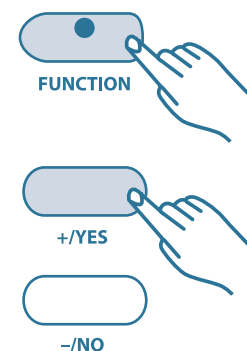



Song Volume

The Song Volume function mode is used strictly as a numerical volume level display. It is not adjustable from the +/YES or -/NO buttons. It is adjustable only by the song volume slider control located underneath the master volume control. When the song volume function mode is engaged, the LCD screen will show the numerical value of the song volume when the song volume slider control is moved to the left or to the right.

Octave

The octave shift function will shift the keyboard note value up or down a full octave. The range is +2 to -2 from normal keyboard note values, where 0 is for normal pitch. You may want to use this 88 note octave shift on certain instrument voices with frequency ranges that differ from the 88 note acoustic piano.

USING THE OCTAVE SHIFT FUNCTION

1. Press the **FUNCTION** button. The function LED indicator will turn on. The first menu item is Touch, which appears on the LCD display.

2. Press the **PAGE UP** button six times to show the octave on the LCD screen.

 
3. Press the +/YES to display the current octave setting.

4. Press the +/YES or the -/NO buttons to change the octave Level and move the keyboard note values up or down by one octave. Octave range is from +2 to -2.

5. Press the **PAGE DOWN** button to show the Layer Octave setting and adjust it following steps 3 and 4. Depending on which voice you have selected, it may sound better if one of the voices is octave shifted.

6. Press the **PAGE DOWN** button to show the Lower Octave setting and adjust it following steps 3 and 4. Depending on which voice you have selected, it may sound better or it may be easier to play if the voice is shifted up or down by one or two octaves.

7. To exit the function mode, press the **FUNCTION** button. The function LED indicator will turn off.

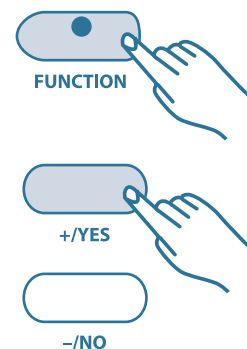




Pedal Assign

This function sets the second pedal for normal soft pedal operation or for song Play/Stop.

CHANGING THE PEDAL ASSIGN SETTING

 1. Press the **FUNCTION** button. The function LED indicator will turn on.
2. Press the **PAGE UP** button 3 times to show Pedal Assign on the LCD screen.
3. Press the **+ / YES** to display the current Pedal assignment setting.
4. Press the **+ / YES** or the **- / NO** buttons to change the Pedal assignment. You can choose from standard Soft Pedal or Play/Stop. The Play/Stop selection will allow the player to use the pedal as a **START/STOP** button for the song function.
5. To exit the function mode, press the **FUNCTION** button. The function LED indicator will turn off.

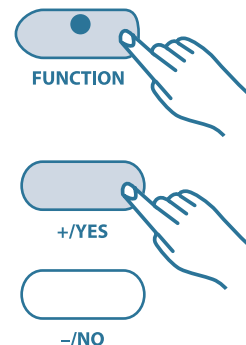


Master Tune


The pitch of this piano is very accurate and stable. It is automatically set to standard A440 pitch when the piano is turned on. The tuning feature makes it possible to tune the pitch of the instrument in fine intervals. Tuning can be accomplished over a range of $\pm$ one semitone in $\pm$ 64 steps.

USING THE MASTER TUNE FUNCTION

1. Press the **FUNCTION** button. The function LED indicator will turn on.
2. Press the **PAGE UP** button twice to show Master Tune on the LCD screen.
3. Press the **+ / YES** to display the current Master Tune setting.
4. Press the **+ / YES** or the **- / NO** buttons to change the Master Tune setting. The range is from -64 to $+64$.
5. To exit the function mode, press the **FUNCTION** button. The function LED indicator will turn off.

  NOTE: Press the +/YES and -/NO buttons simultaneously to reset to 00.

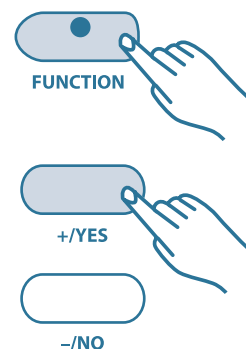

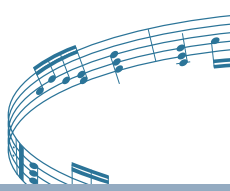



Grade

The Grade feature provides skill feedback while in play-along mode. The grading feature can only function when the song mode is engaged. The grading instructor grades on the following scores:

- 0 - 40% of notes correct and the display will show "Try Again."
- 41 - 60% of notes correct and the display will show "Good."
- 61 - 85% of notes correct and the display will show "Very Good."
- 86 - 100% of notes correct and the display will show "Excellent."

USING THE GRADE FUNCTION

  1. Press the **FUNCTION** button. The function LED indicator will turn on.
2. Press the **PAGE UP** button once to show Grade on the LCD screen.
3. Press the **+ / YES** to display the current Grade setting.
4. Press the **+ / YES** or the **- / NO** buttons to change the Grade setting. The range is either on or off.
5. To exit the function mode, press the **FUNCTION** button. The function LED indicator will turn off.

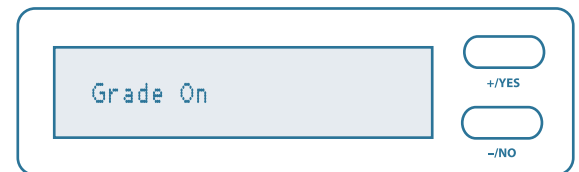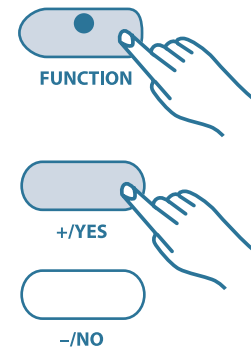



Registration

 
The registration feature offers two memory locations to save your keyboard settings. You can store the desired settings in one button and recall them instantly when needed.

Save Registration

USING THE SAVE REGISTRATION FUNCTION

1. Set up your keyboard with the function and features engaged that you would like to save.
2. Press the **USER REG.** button and hold it down while you press the **PAGE DOWN** button. “b-1: Store” will be displayed on the LCD screen while you press the **PAGE DOWN** button.


*NOTE: To store a second set of your keyboard settings follow steps 1-2 as shown above but instead press the **PAGE UP** button instead of **PAGE DOWN**. The LCD display will show “b-2: Store.”*

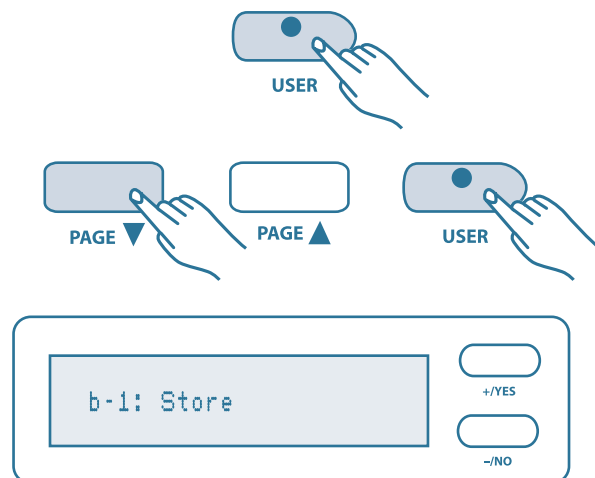

Recall Registration

USING THE RECALL REGISTRATION FUNCTION

 1. Press and release the **USER REG.** button. The function LED indicator will turn on.
2. Press the **PAGE DOWN** button to recall the saved keyboard settings of b-1. Press the **PAGE UP** button to recall the saved Keyboard settings of b-2. The LCD will display “b-1: RegisterBank” or “b-2: RegisterBank” respectively.
3. To exit the registration function mode, press the **USER REG.** button. The function LED indicator will turn off.

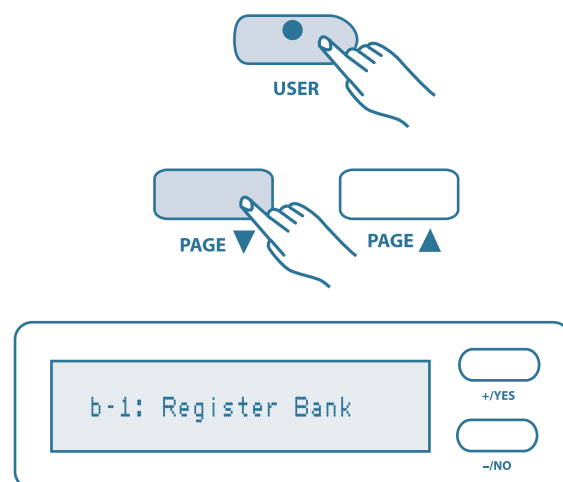



Recorder



 
The Encore features a three track recorder that lets you record what you play on the keyboard and then play it back. Three tracks mean that you can “overdub” one part on top of another, using a different voice if you like. The recorder feature is a useful addition to any keyboard study program since it lets you hear exactly how you sound from the listener’s perspective. It can also be just plain fun. This recorder is able to store four songs, each with up to 3-track recording. This recorded information is nonvolatile and therefore will not be lost when the power is turned off. All 3 tracks can playback separately or together as a complete song. The record function records all settings exactly as you selected and performed them.

 
NOTE: While it is possible to record in Layer mode, you cannot record in Lower mode.

Recording

USING THE RECORDING FEATURE

1. **Prepare:** Prepare to record by setting the voice, reverb level, octave shifts etc. or other parameters as desired.
 2. **Select a Song:** Press the **USER SONG** button repeatedly to select a song, the LED display above the user song button will show the song number selected. This is where the recorded information will be stored.
 3. **Select a track:** There are three tracks available for recording. These are assigned by engaging the **TRACK 1**, **TRACK 2** or **TRACK 3** button. Press and hold down the **REC** button, then press the track button that you want to record in. The corresponding track indicator LED will blink, and the four dots of the beat indicator will blink with the current metronome tempo to show that the recorder is on standby.
 4. **Metronome:** Press the **METRONOME** button to enable the metronome as a reference if so desired. The metronome sound will not be recorded.
- NOTE: If you already have a recorded track in the selected song, the track indicator LED will also be lit and the recorded music will play as a reference for you while you record the new track. If you do not wish for previously recorded tracks to play while you are recording, press the corresponding track button to turn the indicator light off.*

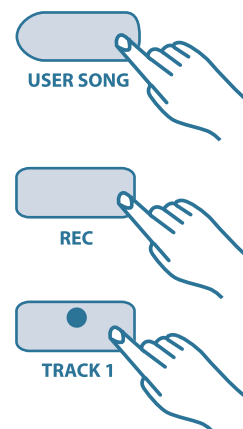

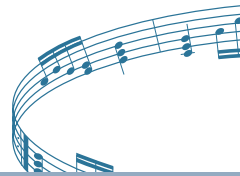

5. **Record on Track 1, 2 or 3:** If the Track 1 LED, Track 2 LED, or Track 3 LED is selected and blinking, the recording will begin as soon as you play the keyboard or press the **PLAY/STOP** button.

NOTE: The contents in a track will be erased as soon you start to record on that selected track. It will be replaced by the new note data that you are recording.

6. **Stop Recording:** Press the **PLAY/STOP** button, the **REC** button or a track button to stop recording.

NOTE: When the record memory is full, recording will stop automatically and “End” will appear on the display screen. Expressed in terms of notes, the total number of notes which can be recorded in all three tracks is about 4,500 (The number of notes may be reduced if operations such as depressing the pedal are carried out.)



Playback

To listen to the passage that you just recorded, press the **PLAY/STOP** button.

TO LISTEN TO THE RECORDED USER SONG

1. Press the **USER SONG** button to select the song you want to play back. Each time you press the **USER SONG** button, the LED above the button will indicate which song is selected, and the LCD display will show the user song number.
2. After you have selected your desired user song, the Track LED indicators will show which tracks contain recorded data. If you do not wish to hear any of the 3 Tracks, press the corresponding **TRACK** button to turn that track off. Its LED indicator will turn off.
3. Press the **PLAY/STOP** button to hear the recorded track(s). The LED dots of the beat indicator will flash in consecutive order. You can change the tempo of your recorded track by pressing the **TEMPO +/-** buttons while the recording is being played back. You may also accompany the recorded playback on the keyboard while the recording is playing back.
4. Press the **PLAY/STOP** button to stop the playback.
Playback will stop automatically when the recording reaches its end.
5. Press the **USER SONG** button to exit the user song mode. The user song indicator LEDs will turn off after **USER SONG 4**. The LCD display screen will revert to the current selected instrument voice.

- 1 ●
- 2 ●
- 3 ●
- 4 ●



 


 
Erasing Tracks

TO ERASE THE MUSIC RECORDED ON TRACK 1/2/3

1. Press the **USER SONG** button to select the song you want to erase.
Each time you press the **USER SONG** button, the LED above the user song button will indicate which is selected. Also, the LCD display will show the user song number.
2. Press and Hold the **REC** button down.
3. Press the **TRACK** button that you which to erase while you continue to hold down the **REC** button. This will immediately erase the existing data from your previous recording.
4. Release the **REC** button (the track LED is blinking).
5. Press the **TRACK** button again (the track LED will go off).
6. Repeat Steps 2 through 5 until all the tracks that you desire are erased.
7. When the track has been properly erased, its track button LED will not turn on when the **USER SONG** button is pressed. This indicates that there is no recorded information on this track.

- 1 ●
- 2 ●
- 3 ●
- 4 ●



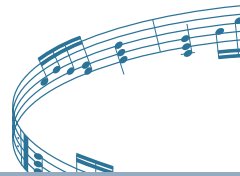


Play Along Songs



There are over 50 songs built into the Encore for your musical enjoyment. These songs have separate left and right-hand parts that can be turned on and off as required so you can practice the corresponding part on the keyboard. The right-hand part is played by selecting the **LEFT** Button in the song section of the control panel. The left-hand part is played by selecting the **RIGHT** Button in the song section of the control panel. You can change the song by pressing the **+ / YES** , **- / NO** buttons.


USING THE PLAY-ALONG SONG FEATURE TO LISTEN TO THE ENTIRE SONG

 1. Press the **SONG** button. The first song number and abbreviated name of the song will appear on the LCD display. Use the **+ / YES** , **- / NO** buttons to select a song.
2. Press the **PLAY/STOP** button to hear both hand parts playing the entire song.

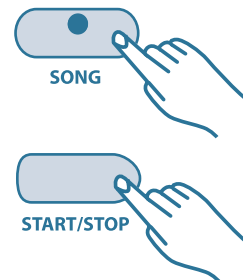

USING THE SONG FEATURE TO PRACTICE THE RIGHT HAND OF THE SELECTED SONG

 1. Press the **SONG** button. The song LED will turn on.
2. Press the **RIGHT** button. The right LED will turn on.
3. If you want to play slower or faster than the preset tempo, press the **TEMPO+** or **TEMPO-** button to adjust the rate to the preset tempo. The range is 50% to 150%
4. Press the **PLAY/STOP** button. You will hear the metronome “count in” the song. You will then hear the left-hand part of your selected song.
5. Play the right-hand melody part of your selected song while the left-hand part plays.
6. During playing, press the **METRONOME** button if you want to disable the metronome sound during playback.
7. After the song finishes it will automatically repeat unless the **PLAY/STOP** button is pressed or the song function is disengaged.

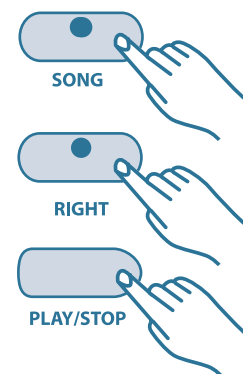


USING THE SONG FEATURE TO PRACTICE THE LEFT HAND OF THE SELECTED SONG

1. Follow steps 1-7 listed above, substituting the **LEFT** button whenever **RIGHT** button is mentioned.



USING THE SONG FEATURE TO PRACTICE BOTH HANDS OF THE SELECTED SONG

 1. Press the **SONG** button. The song LED will turn on.
2. Press the **RIGHT** and **LEFT** buttons simultaneously. The right and left LEDs will turn on.
3. Press the **PLAY/STOP** button. You will hear the metronome “count in” the song.
4. Play the right and left-hand parts of your selected song. The metronome will continue to play to assist you in keeping time. If it is necessary, you can turn the metronome off by pressing the **METRONOME** button.
5. After the song finishes it will automatically repeat unless the **PLAY/STOP** button is pressed or the song function is disengaged.

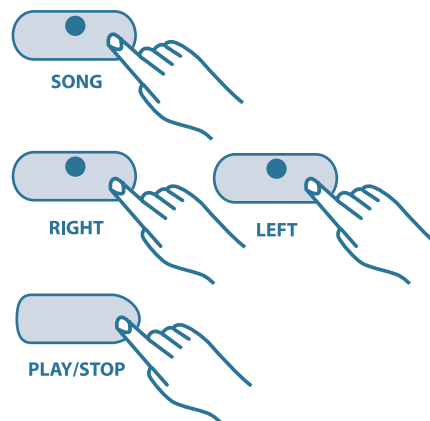

Grading

You can set the Encore to offer a grade at the completion of your play-along song performance. If the grading function is engaged you will see the grade of “Try Again,” “Good,” “Very Good” or “Excellent” on the LCD screen.

To turn off this function, enter the function mode.

0 - 40% of notes correct and the display will show “Try Again.”

41 - 60% of notes correct and the display will show “Good.”

61 - 85% of notes correct and the display will show “Very Good.”

86 - 100% of notes correct and the display will show “Excellent.”

USING THE GRADING FEATURE TO CHECK YOUR PRACTICE PROGRESS

1. Follow the steps listed in the Functions section under “Using the Grading Function” of this manual to enable the grading function.



MIDI

 
MIDI stands for Musical Instrument Digital Interface. This is a world-wide standard communication interface that enables electronic musical instruments and computers (of all brands) to communicate with each other so that instructions and other data can pass between them. This exchange of information makes it possible to create a system of MIDI instruments and devices that offer far greater versatility and control than is available with isolated instruments. Whether you interface with computers, sequencers, expanders or other keyboards your musical horizons will be greatly enhanced.

MIDI CONNECTION

The MIDI terminals are located on the left side panel of the piano.

1. **MIDI IN:** This terminal receives MIDI data from an external MIDI device.
2. **MIDI OUT:** This terminal transmits data from this instrument to other MIDI devices. The transmitted data includes the note and touch velocity produced while playing on the keyboard as well as voice changes, wheel operation, and recorded playback for the melody tracks. Demo songs are not transmitted.

NOTE: For more information regarding transmitted MIDI data, please see the next page and/or the MIDI implementation chart.

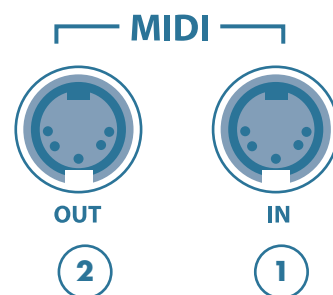

MIDI CHANNEL: The MIDI system in this unit has 16 channels numbered from 1-16. Each of the channels is responsible for a voice. When the instrument receives MIDI information from an external device, the active channel is determined by the control message. The transmission channels on this keyboard are fixed as follows:

Channel 1: Master voice (keyboard)

Channel 2: Layer voice (keyboard)

Channel 3: Split voice (keyboard)

Channel 4: Track 1, playback, Master Voice

Channel 5: Track 1, playback, Layer Voice

Channel 6: Track 2, playback, Master Voice

Channel 7: Track 2, playback, Layer Voice

Channel 8: Track 3, playback, Master Voice

Channel 9: Track 3, playback, Layer Voice

Please see the MIDI Implementation Chart for more detail.




MIDI Implementation Chart

Function	Transmitted	Recognized	Remark
Basic Channel	1 CH	1-16 CH	
Channel changed	1-9 CH	1-16 CH	
Default Mode	X	3	
Note Number	11-118	0-127	
Velocity: Note On Note Off	9nH,V=1-127 9nH,V=0	9nH,V=1-127 9nH,V=0 or 8nH	
Pitch Bender	O	O	
Control Change: 1	O	O	Modulation
5	X	O	Portamento value
7	X	O	Volume
10	X	O	Pan
11	X	O	Expression
64	O	O	Sustain
65	X	O	Portamento yes/no
66	X	O	Sostenuto
67	O	O	Soft Pedal
80, 81	O	O	Reverb, Chorus program
91, 92	O	O	Reverb, Chorus send level
98, 99	X	X	NRPNL, NRPHH
100, 101	X	X	RPNL, RPNH
121	X	O	Reset all controllers
123	X	O	All notes off
Program Change	00-11, 16-21, 24-26 32, 34, 35, 48-50, 52-54	0-127	
System Exclusive	X	X	
Sys. Common: Song Select	X	X	
Sys. Common: Song Position	X	X	
System: Clock	X	X	
Real Time: Commands	X	X	

Mode 1: OMNI ON, POLY
Mode 2: OMNI ON, MONO

Mode 3: OMNI OFF, POLY
Mode 4: OMNI OFF, MONO

 O = Yes
X = No

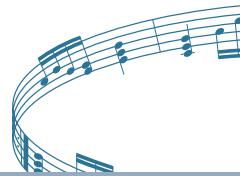

Voice List

LCD Display	MIDI #	Description
01 Grand Piano	00	6-foot Bosendorfer Grand (Stereo)
02 Grand Piano2	01	7-foot Grand Piano (Mono)
03 Honky-Tonk	03	Detuned Ragtime Piano
04 Elec.Piano 1	04	Vintage Rhodes Electric Piano
05 Elec.Piano 2	05	FM Electronic Piano
06 Synth Piano	02	Electric Piano & Synth Pad
07 Harpsichord1	06	Single String Harpsichord
08 Harpsichord2	08	Double String Harpsichord
09 Clavinet	07	Vintage Hohner Clavinet
10 Vibraphone 1	11	Classic Vibraphone
11 Vibraphone 2	10	Vibraphone with Vibrato
12 Glockenspiel	09	Glockenspiel
13 Pipe Organ 1	20	Principals & Flute Church Organ
14 Pipe Organ 2	19	Full Tutti (16, 8, 4 and 1 1/3 pipes)
15 Pipe Organ 3	21	3D Big Church Organ
16 Jazz Organ 1	16	Jazz Organ - Slow Leslie
17 Jazz Organ 2	17	Jazz Organ - Fast Leslie
18 Rock Organ	18	Distorted Hammond - Tube Leslie
19 StringEnsb1	48	3D Velocity Attack Strings
20 SlowStrings	49	Slow Attack Strings
21 Synth String	50	Analog Synth Strings
22 Choir Aahs	52	3D Mixed Choir
23 Choir Oohs	53	Velocity Switched Choir
24 Synth Voice	54	Mixed Synth Choir
25 Nylon Guitar	24	Acoustic Nylon String Guitar
26 SteelGuitar	25	Acoustic Steel String Guitar
27 Elec.Guitar	26	Electric Guitar
28 AcousticBass	32	Jazz Acoustic Bass
29 Bass & Ride	34	Acoustic Bass with Ride Cymbal
30 ElectricBass	35	Electric Bass

NOTE: The MIDI number is a transmitted program number. When the MIDI program number is received, it will respond as the instrument voice is listed. Some of them are not General MIDI program numbers.



Specifications

KEYBOARD:

88-note, hammer-action keyboard

POLYPHONY: 32

VOICES:

30 Voices

VOICE MODES:

Layer (dual) Voice

Lower (split) Voice

VOICE EFFECTS:

Reverb

Chorus

Octave

SET UP:

Power: On/Off

Main Volume Control: Min-Max

Song Volume Control: Min-Max

ENTRY BUTTONS: +/YES, -/NO

DISPLAY: 16 Character LCD

REGISTRATION MEMORY: 2

DEMONSTRATION: Ten songs

PLAY-ALONG: 58 songs

RECORDING: Four songs, 3 track recording 4500 notes memory

OVERALL CONTROL:

Transpose

Tempo

Pitch Bend Wheel

Modulation Wheel

FUNCTION:

Metronome

Reverb Level

Chorus Level

Touch Sensitivity

Split Point

Pedal Assign

Master Tune

Grade

AUXILIARY JACKS:

Headphone x 2

Stereo Line Out

Power In

MIDI In/Out

JACKS:

Sustain Pedal

Soft Pedal

Volume Pedal

VOLTAGE: DC 12V, 3.5A

AMPLIFIER: 12.5W x 2

DIMENSIONS:

55 x 13 x 5.4 in, stand exclusive, L x W x H
(1390 x 327 x 138 mm)

55 x 19 x 30 in, including optional stand, L x W x H
(1390 x 480 x 760 mm)

WEIGHT: 76.5 Lbs/34.7 Kg

STANDARD ACCESSORIES:

Power adapter

Sustain pedal

Music rest

Owner's manual

OPTIONAL ACCESSORIES:

Matching stand and bench (ref: SB90)



Warranty Information

1 Year Parts & Labor Warranty

Limited Warranty

To the original purchaser, this piano is warranted to be free from electronic and/or structural defects in materials and workmanship for a period of one (1) year from the date of original purchase. If this Williams piano is defective, at its option during the warranty period and subject to the terms of this limited warranty and upon proof of purchase, Williams will either repair or replace the listed piano with a same or similar model of equal age or newer. Any repairs or modifications must be completed by Williams and/or an authorized agent of Williams. The warranty obligations as set forth herein shall be performed free of charge with the exception of all delivery and shipping expenses. This limited warranty will not apply to this product in the case of misuse, abuse, neglect, alterations, normal “wear and tear” or other circumstance not directly attributed to electronic and/or structural defects in materials or workmanship. Without limiting the foregoing, this limited warranty will also be inapplicable to products that have not been maintained or replaced in accordance with the manufacturer’s instruction, or to products from which the serial number has been removed or altered. If covered defects are found, contact your authorized Williams dealer with regard to the alleged defect within ten (10) days of discovery of the problem.

The foregoing repair or replacement obligation for defective products shall be the sole and exclusive remedy of this limited warranty. All warranties including, but not limited to, the express warranty and the implied warranties of merchantability and fitness for a particular purpose are limited to the one (1) year warranty period. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you. There are no express warranties beyond those stated here. In the event that applicable law does not allow the limitation of the duration of the implied warranties to the warranty period, then the duration of the implied warranties shall be limited to as long as is provided by applicable law. No warranties apply after that period.

Retailer and manufacturer shall not be liable for damages based upon inconvenience, loss of use of product, loss of time, interrupted operation or commercial loss or any other incidental or consequential damages including but not limited to lost profits, downtime, goodwill, damage to or replacement of equipment and/or property.

Register online at www.williams pianos.com, or fill out the form below.

Customer Name: _____
Telephone: _____
Address/City/State/Zip: _____
Dealer Name: _____
Dealer City: _____
Make: _____
Model: _____
Serial #: _____
Date of Purchase: _____

Customer Signature: _____
Date: _____

A copy of this warranty must be mailed to WILLIAMS within 10 days of receipt. Williams Pianos, P.O. Box 5111, Thousand Oaks, CA. 91359-5111

